ADD SSD

Version	

Solution:

The kits to be installed are as follows:

P/N	Qty	Description
E2Y-6S11111-CA7	1	SSD thermal paste
E43-1202512-G68	2	SSD bracket screw
E2M-5850311-A89	1	SSD bracket
E43-1203007-G68	1	SSD screw

How to add the SSD kit:

1. Make the bracket rivet up and right, align the two hole then locking screws, lock 1 # screw first, and then lock the 2 # screw, the screw P/N is E43-1202512-G68

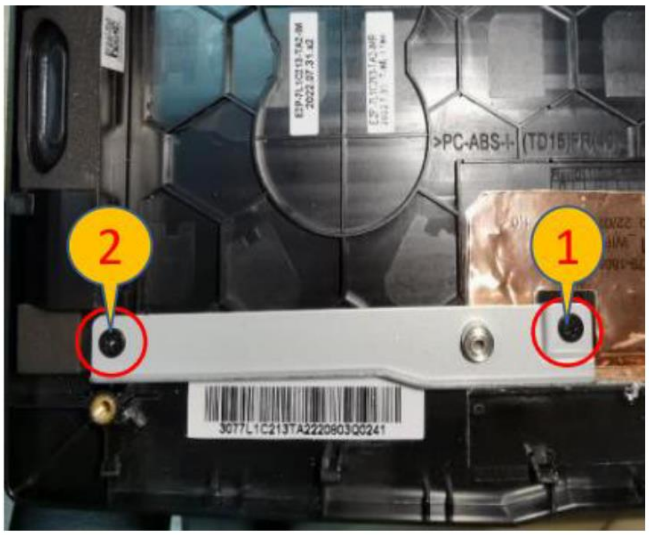

2. After the SSD is assembled in place, lock the screw(P/N:E43-1203007-G68). Th attach the heat dissipation paste on the SSD label surface. The heat dissipation

2. After the SSD is assembled in place, lock the screw(P/N:E43-1203007-G68). Th attach the heat dissipation paste on the SSD label surface. The heat dissipation paste P/N is E2Y-7L50111-CA7. As shown below: